

Sobivad mudelid:

NP900X1A, NP900X1A-A01US, NP900X1A-A01, NP900X1AA01US; NP900X1B, NP900X1B-A01US, NP900X1B-A01, NP900X1BA01US; NP900X1B, NP900X1B-A02US, NP900X1B-A02, NP900X1BA02US; NP900X3A, NP900X3A-A02US, NP900X3A-A02, NP900X3AA02US

NP900X3A, NP900X3A-A03US, NP900X3A-A03, NP900X3AA03US; NP900X3A, NP900X3A-A05US, NP900X3A-A05, NP900X3AA05US

NP900X3A, NP900X3A-B01US, NP900X3A-B01, NP900X3AB01US; NP900X3A, NP900X3A-B02US, NP900X3A-B02, NP900X3AB02US

NP900X1B, NP900X1B-A01SE, NP900X1B-A01, NP900X1BA01SE; NP900X1B, NP900X1B-A01AU, NP900X1B-A01, NP900X1BA01AU

NP900X1B, NP900X1B-A01UK, NP900X1B-A01, NP900X1BA01UK

For Samsung New Series 9:900X3C 900X4B 900X4C 900X4D NP900X3C NP900X4B NP900X4C NP900X4D

For Samsung Series 7 Notebook:Series 7 XE700T1A; Series 7 XE700T1A-A01US; Series 7 XE700T1A-A02US; Series 7 XE700T1A-A03US; Series 7 XE700T1A-A04US; Series 7 XE700T1A-A05US; Series 7 XE700T1A-A06US; Series 7 XE700T1A-A01; Series 7 XE700T1A-A02; Series 7 XE700T1A-A04; Samsung Series 5 13.3 Ultrabook:NP530U3BI, NP530U3B-A02US;530U3BI,530U3B-A01US, NP535U3C-A01MY, NP535U3C-A01US, NP535U3C-A01UK

For Samsung Series 5 Chromeboo Notebook:XE500C21,XE500C21-A01US,XE500C21A01US; XE500C21,XE500C21-A03US,XE500C21A03US; XE500C21,XE500C21-A04US,XE500C21A04US; XE500C21,XE500C21-H01US,XE500C21H01US; XE500C21,XE500C21-H02US,XE500C21H02US; XE500C21,XE500C21-H04US,XE500C21H04US

For Samsung Series 3:

For Samsung Series 3 305U1A-A01

For Samsung Series 3 305U1A-A02

For Samsung Series 3 305U1A-A03

For Samsung Series 3 305U1A-A04

For Samsung Series 3 305U1A-A05

For Samsung Series 3 NP305U1A

For Samsung Series 3 NP305U1A-A01US

For Samsung Series 3 NP305U1A-A02US

For Samsung Series 3 NP350U2A

For Samsung Series 3 NP350U2A-W01UB

For Samsung Series 3 NP300U1A

For Samsung Series 3 NP300U1A-A01US

For Samsung NP305U1A Series: NP305U1A-A01CA, NP305U1A-A02CA

For Samsung NP530U3B Series: NP530U3B-A02CA, NP530U3C-A01CA, NP530U3C-A03CA. NP530U4B-A01CA. NP530U4B-

For Samsung NP535U3C Series: NP535U3C-A03CA, NP535U3C-A04CA, NP535U3C-A01CA. NP535U3C-A02CA

For Samsung NP535U4C Series: NP535U4C-A01CA, NP535U4C-A02CA, NP535U4C-S02CA

For Samsung NP540U3C Series: NP540U3C-A01CA, NP540U3C-A02CA

For Samsung NP900X1B Series: NP900X1B-A01CA, NP900X1B-A02CA

For Samsung NP900X3A Series: NP900X3A-A01CA, NP900X3A-A02CA, NP900X3A-A03CA. NP900X3A-B01CA. NP900X3A-

For Samsung NP900X3B Series: NP900X3B-A01CA, NP900X3B-A01US

For Samsung NP900X3C Series: NP900X3C-A01CA, NP900X3C-A02CA, NP900X3C-A03CA

For Samsung NP900X3D Series: NP900X3D-A03CA

For Samsung NP900X3E Series: NP900X3E-A02CA

For Samsung NP900X4B Series: NP900X4B-A02US

For Samsung NP900X4C Series: NP900X4C-A01CA, NP900X4C-A02CA, NP900X4C-A03CA, NP900X4C-A04CA

For Samsung NP900X4D Series: NP900X4D-A03CA, NP900X4D-A04CA